

079750 Royal Enfield Himalayan Hugger Fitting Instructions



Kit includes:

2X	M6 x 12mm Flanged Button Head Bolts	CBOL0123
2X	M6 x 20mm Button Head Bolts	CBOL0252
2X	Rubber Grommets	CGRO0013
2X	Steel Collars	CGRO0016
2X	M6 Black Plastic Washers	CWAS0221
1X	Small Rubber Foot	CGRO0901

- Remove the chainguard and unclip the brake hose line from the forward two supports. The bolts holding the two brake hose supports are to be replaced (see diagram below).
- Fit the **2X CGRO0013** & **2X CGRO0016** to the right-hand side of the Hugger. The small rubber foot supplied fits behind these two mounting points in the smaller hole. The large part of the foot needs to be on the underside of the Hugger.
- Now feed the Pyramid Hugger over the rear tyre and into fitting position. For fixing points **A & B** use **2X CBOL0252**, **2X CGRO0013** & **2X CGRO0016** & for fixing points **C & D** use **2X CBOL0123** & **2X CWAS0221**.

Note: The ABS supports are to be refitted on top of the Pyramid Hugger at fixing points **A & B** using the new fixings supplied. It is easier to tighten all bolts loosely before fully tightening for a final fit.

- Be sure to check all fixings periodically.

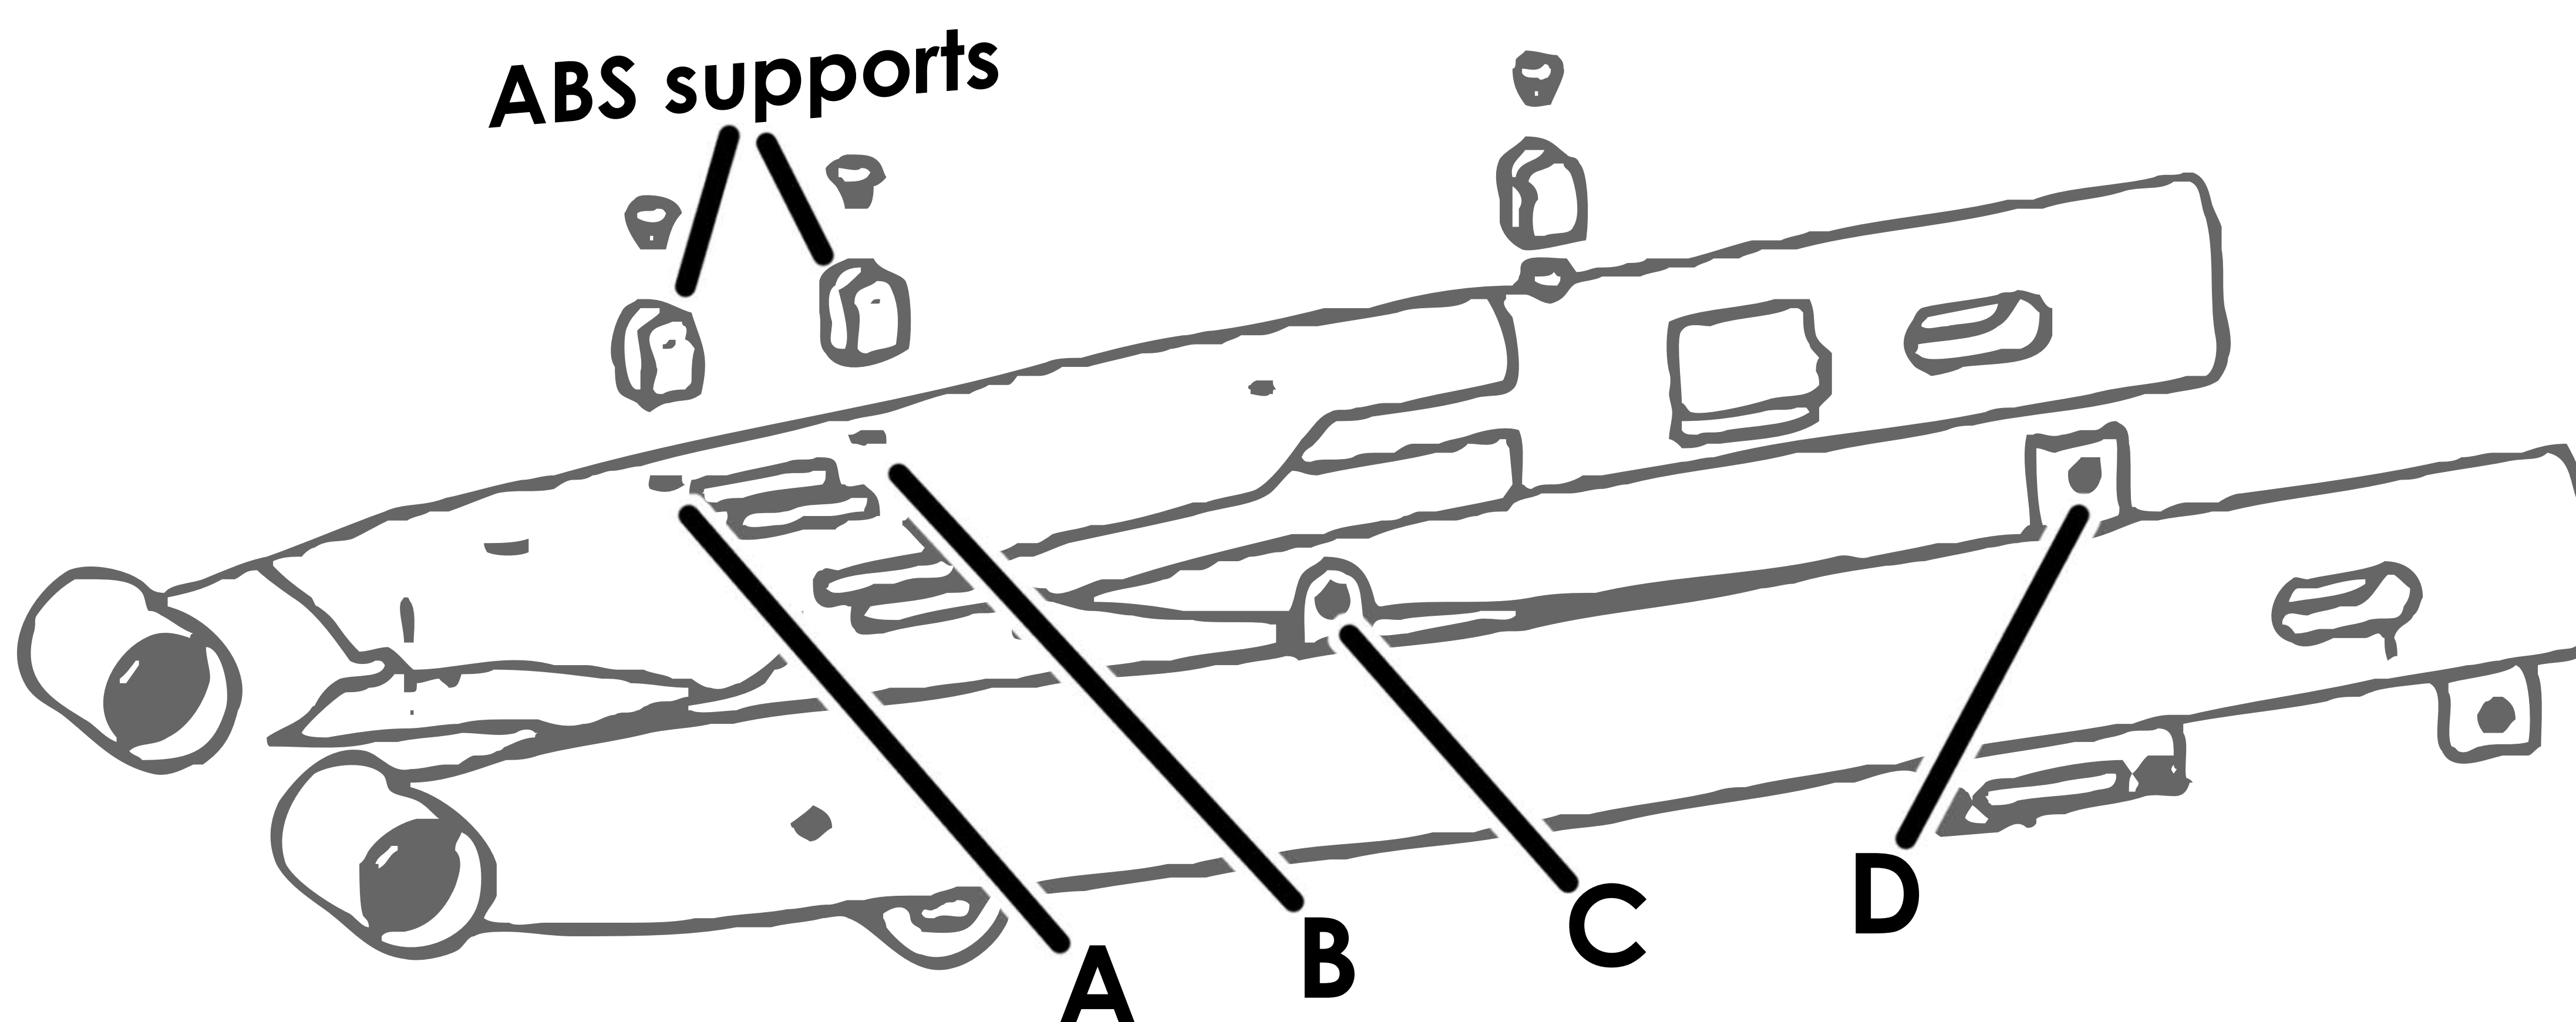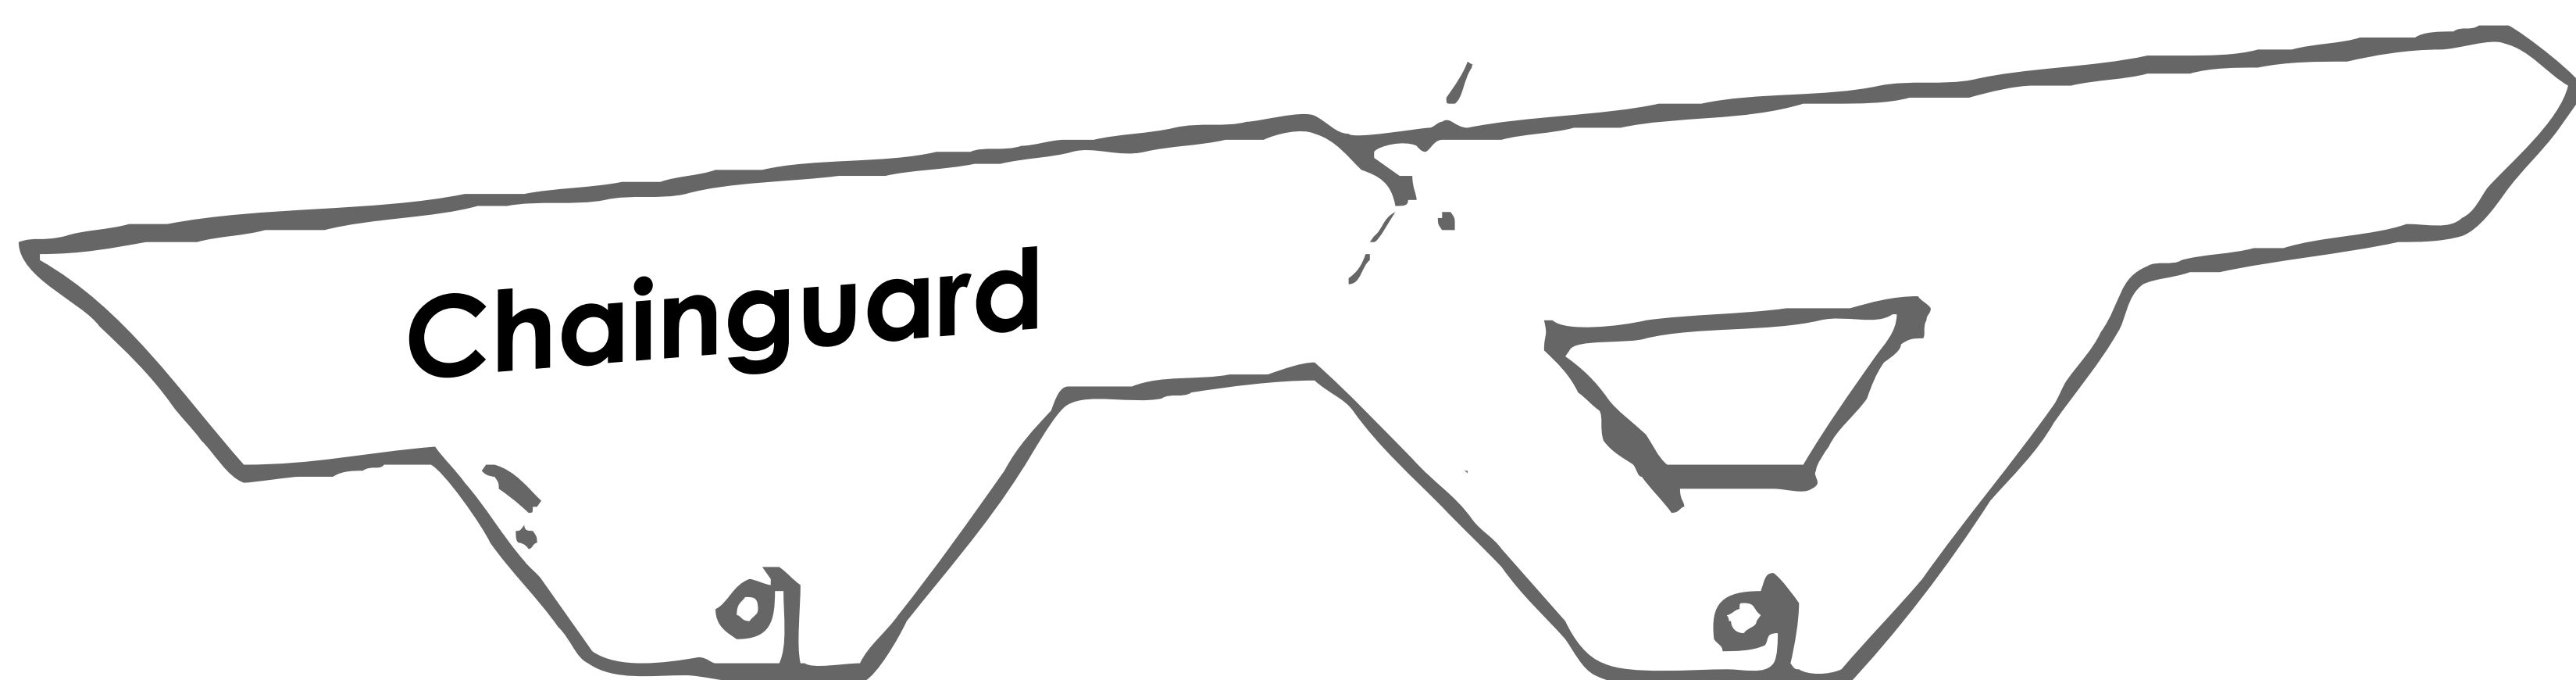

Any questions?
sales@pyramid-plastics.co.uk
 01427 677990
www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!

