

051905 Honda NT1100 Extenda Fenda *EXTRA* Fitting Instructions


Kit Includes:

| | | |
|----|-----------|--|
| 1X | C051905 | Moulding |
| 2X | CFK051905 | Brackets (pair) |
| 4X | CBOL0106 | M5 X 12mm Black Stainless Steel Bolt |
| 8X | CWAS0105 | M5 Stainless Steel Washer |
| 4X | CNUT0151 | M5 Stainless Steel Serrated Nut |
| 1X | CFOA0002 | Foam Strip 20mm X 1.5mm (cut to 190mm in length) |
| 4X | CFIT0013 | Push-rivets |

We advise the use of thread locking fluid on all the fixings for this product.

- Loosely attach the mudguard to the brackets using the M5 fixings supplied. Place the M5 stainless steel washers under the bolt head and under the serrated nut.
- Cut and attach the foam provided in the area marked 'A' below.
- Remove the bottom OEM bolts from the brake calipers marked 'B' below.
- Attach the mudguard assembly to the brake calipers using the OEM bolts. Once the mudguard is in place, check alignment. The exact position of the mudguard can be adjusted by pulling/pushing the assembly up/down if required. Avoid excessive pressure if doing so. **Now tighten all the mounting points. Check fixings periodically.**

Note: The 4 push-rivets supplied are **not integral** to the fitment of this product, but have been supplied for those customers who would prefer to have mechanical fixing at the point where the two guards meet.

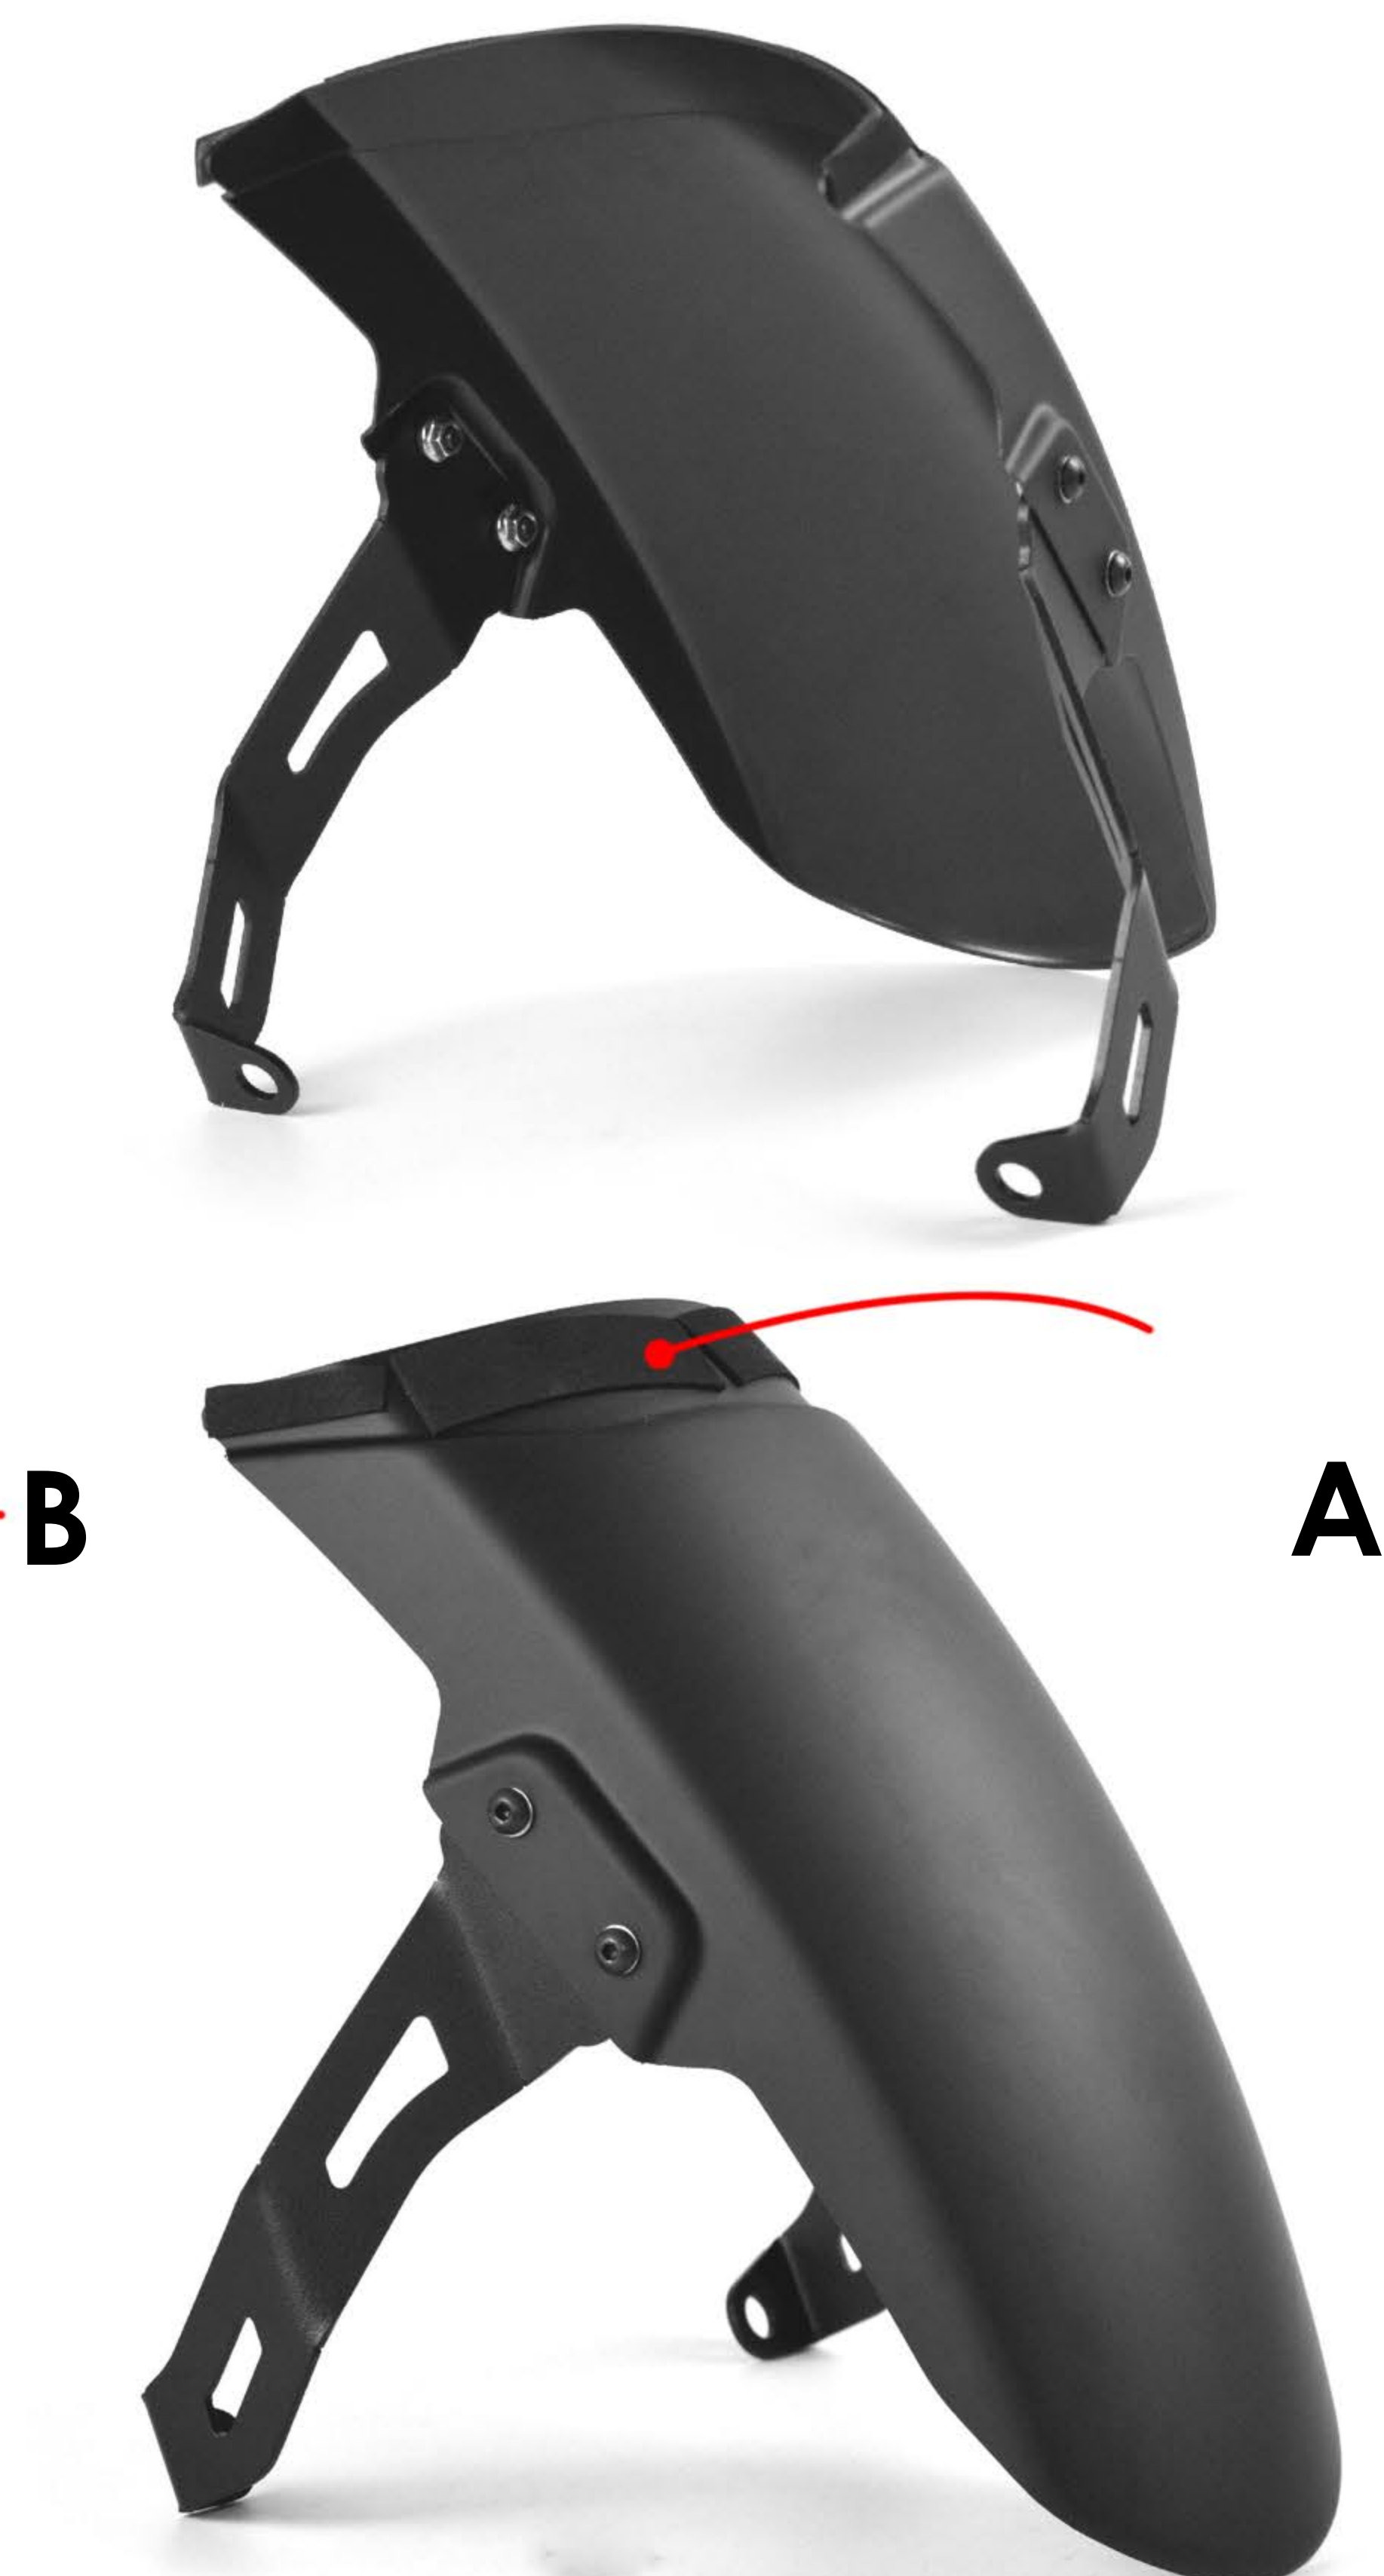

Any questions?
sales@pyramid-plastics.co.uk
 +44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and
 feel free to leave us a review!